SLAP PATCH®

FOR EMERGENCY ROOF REPAIRS

WORKS ON WET OR UNDERWATER SURFACES
FOR USE ON ALL COMMERCIAL ROOFS INCLUDING EPDM RUBBER ROOFS

CAN BE APPLIED WET OR UNDERWATER!

Slap Patch is a super strong, rubberized semi-permanent waterproof patch that can bond, seal and repair virtually everything. Very easy to use, just slap it on and you're done! Perfect for temporary

roof repairs during wet emergency conditions. Can be applied on wet or underwater surfaces!

Slap Patch is reinforced and creates semi-permanent long-lasting repairs even underwater. Perfect for making watertight, durable repairs on all commercial roofs including EPDM. Slap Patch instantly seals out water, air and moisture to create a super strong, flexible, watertight barrier.

This patch is UV resistant, environmentally friendly, VOC-free and his a wide temperature range so it can be used in extreme weather conditions. Slap Patch bonds to all hard surfaces.


Just Peel-It & Seal-It. It's that simple!



- -Works on all metals, BUR, EPDM rubber, PVC, ABS Fiberglass etc.
- -Super strong, semi-permanent, rubberized, waterproof
- -Specially formulated with a thick, flexible, rubberized backing that conforms to any shape or object
- -Can be applied hot or cold, wet or dry, even underwater
- -Instantly seals out water, air and moisture to create a super strong, flexible, watertight barrier
- -UV & temperature resistant, environmentally friendly, VOC-free
- -Bonds to all hard surfaces
- -Bond will increase with time and pressure
- -Quick and easy to use, NO tools required
- -Available in 3"x6", 6" x 9" and 9" x 12"



Wet Metal Roof Repair

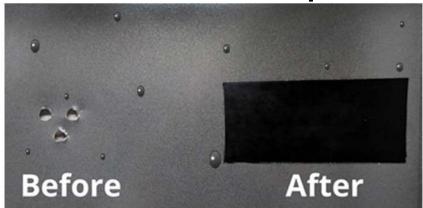

Works on EPDM too...

Applying Slap Patch Repair Patch is as easy as 1...2...3...

- 1. Cut Slap Patch into any size you want. Place remaining material back in protective bag.
- 2 Remove white backing tape to expose the sticky resin. Apply Slap Patch to repair area with sticky side down and press firmly.

 3 After applying patch remove the transparent film backing on
- 3 After applying patch remove the transparent film backing on the top side of the patch. That's it, you're done!

For More Info Contact

Dick Simon 302-231-2624

Dick.BullseyeProducts@yahoo.com

